


SkyROLL rollers assembly instruction **(preparation for installation)**

Complete instructions of assembly, montage and usage are available at
www.skyfens.pl - products>SkyROLL

1. Take out all the components from the two boxes
2. Pull the top and bottom boxes apart to the length of the side rails

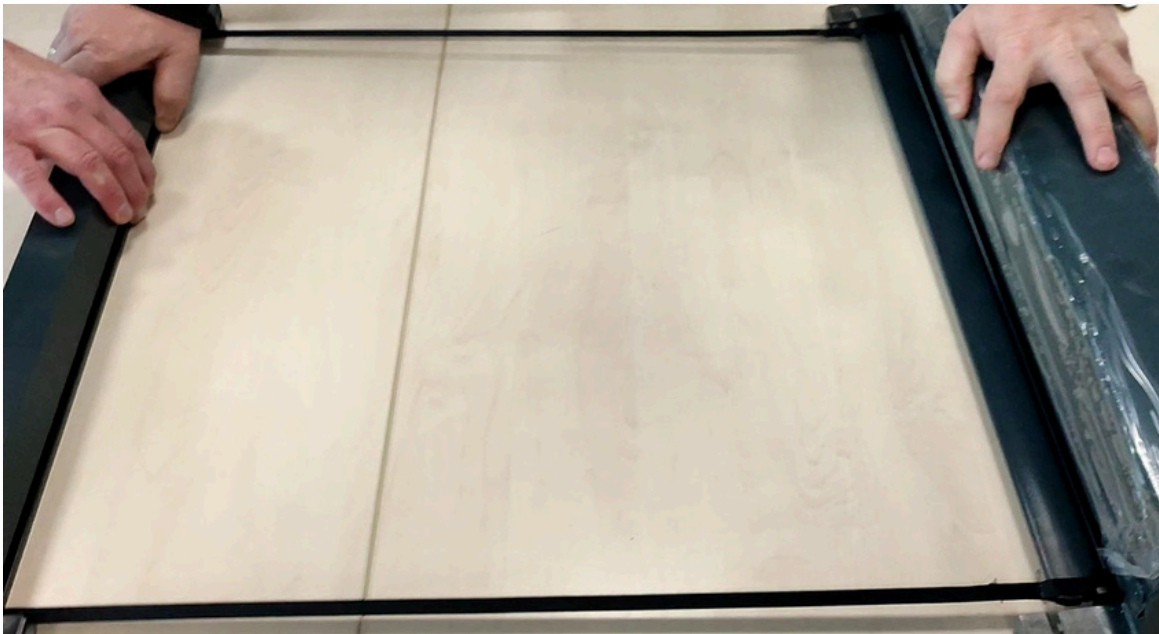

3. Fit the rails by sliding them over the upper and lower sides (the upper part of the rail has two holes drilled in it, the lower one). Make sure that the tape connecting the boxes does not twist and is inside the chamber with the rubber seals.



4. Turn the assembled roller shutter over and screw the rails to the upper and lower boxes with six screws (four to the upper box, two to the lower box).

